

## Description

- **8** sockets controlled independently via Ethernet/Internet with the web browser.
- Worldwide control.
- No software (except web browser) needed to control or adjust.
- Can be used by any operating system (with a web browser).
- **HTML of the pages can be changed** and loaded on.
- **8 inputs or outputs** (IO) - freely configurable with edge detection and toggle (not ADV).
- Plain text **backup system**. Settings can be changed and loaded.
- **Sensor** (temperature, humidity and brightness) connectable (only HUT, HUT2).
- Automatic IP assignment: DHCP.
- Automatic time setting from an SNTP server.
- Calling via host name eg: http: // net-control or IP.
- Free choice of the HTTP port (0-65535), thus several devices accessible from the Internet.
- **'HoldOn'** buttons: relay or IO remains on as long as the button is held down. Two relays or IO's can be used for the +/- control (for example dimmer).
- **4 timers + 1 solar timer** per socket with Time-Line display.
- Exceptions (day / month). On selected days all timers are skipped.
- **Keepalive function**: A network device can be pinged and - should it not respond - be disconnected from the mains for an adjustable period of time.
- Automatic and time-delayed (0-18.2h) switching on the sockets after starting (power failure).
- Switching can also be done as a pulse (0-65535 sec.; 0-18.2h).
- Time distance of the relays with simultaneous switching can be determined (0-255 ms).
- **Wake on LAN**.
- Sockets can be locked individually.
- **User system** with rights assignment.
- German / English selectable as menu language.
- **Logbook** of the last 128 events. Power failures are registered (**retained without voltage**).
- **UDP interface and URL interface** for integration into own software.
- **LabView** Virtual Instrument for UDP interface.
- Multi NET-PwrCtrl Controls all devices on the network (also as **C# source code**).
- Firmware upgrade via Ethernet possible at any time (Ethernet Bootloader).
- Sturdy housing.

### LAN interface

Standards Compliance  
Data transfer rates  
Protocols

Plug type  
Cable Compatibility

IEEE802.3(10 Base-T)  
10 MBit/s  
ARP, DNS, IP, NetBIOS Name Service, ICMP (Ping), UDP, TCP,  
DHCP, HTTP, SNTP, SMTP.  
RJ-45  
100 BASE-TX: Category 5, 2 4 UTP 10  
BASE-T: Category 3, 4, 5 2 UTP

## ADV

### Characteristics:

Sockets (Controllable):  
Digital input / output (I / O):  
Nominal voltage:  
LAN cable  
Power cable  
Power consumption

Max. Load on the sockets  
All total max .:  
Each socket max .:

### ADV - PRO

8 (8)  
no  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

2300 VA  
2300 VA

### ADV- POWER

8 (8)  
no  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

4600 VA  
2300 VA

### ADV - POWER 19"

8 (8)  
no  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

4600 VA  
2300 VA

## IO

### Characteristics:

Sockets (Controllable):  
Digital input / output (I / O):  
Nominal voltage:  
LAN cable  
Power cable  
Power consumption

Max. Load on the sockets  
All total max .:  
Each socket max .:

### IO - PRO

8 (8)  
8 x DB15 + [SUBCON 15/M-SH](#)  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

2300 VA  
2300 VA

### IO- POWER

8 (8)  
8 x how IO - PRO  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

4600 VA  
2300 VA

### IO - POWER 19"

8 (8)  
8 x how IO - PRO  
100-240V~ 50-60Hz  
2 m  
1,9 m  
3,6 W

4600 VA  
2300 VA

## HUT

### Characteristics:

Relays  
Digital input/output (I/O):  
Sensor Anschluss  
Nominal voltage:  
LAN cable  
Power consumption

Max. Load of a relay

### HUT

8  
8  
Adapter with RJ45  
230V~ 50Hz  
2 m  
3,0 W

16A/250V~  
16A/14V-  
TÜV R50126372

### HUT-DC

8  
8  
Adapter with RJ45  
8-30V~/10-40V-  
2 m  
1,6 W

16A/250V~  
16A/14V-  
TÜV R50126372

### HUT - AC

8  
8  
Adapter with RJ45  
100-240V~ 50-60Hz  
2 m  
3,6 W

16A/250V~  
16A/14V-  
TÜV R50126372

## HUT 2

### Characteristics:

Relays  
Digital input/output (I/O):  
Sensor Anschluss  
Nominal voltage:  
LAN cable  
Power consumption

Max. Load of a relay

### HUT2 LV(-S)

8  
8  
RJ45  
8-30V~/10-40V-  
2 m  
1,6 W

16A/250V~  
16A/14V-  
TÜV R50126372

### HUT2 HV(-S)

8  
8  
RJ45  
100-240V~ 50-60Hz  
2 m  
3,6 W

16A/250V~  
16A/14V-  
TÜV R50126372

## Installation

Connect the network cable. Connect the NET-PwrCtrl to the mains.  
The LED flashes fast in the first 2 seconds and then every second.  
Since most networks have a DHCP server (also present in a DSL-Router), the network setting is automated.

Start the browser with the address: <http://net-control> or [net-control/](http://net-control/).

User: **admin**  
Password: **anel**

If the device does not answer, please check if the DHCP server is present in the network or continue with the instructions "Without DHCP" below.

The program [,NET-PwrCtrl Discoverer.exe](#) searches for all devices in the network.

## With DHCP

Since most networks have a DHCP server (also present in a DSL-Router), the network setting is automated. After switching on the NET-PwrCtrl, the DHCP function ensures the allocation of all necessary parameters to be included in the network.

The device can now be accessed via browser with the address: <http://net-control>.

## Without DHCP (not recommended)

Connect the device and assign the following parameters to the network card:

IP: 192.168.0.1;  
Subnet mask: 255.255.255.0.

The device can now via browser with the address:  
<http://192.168.0.244>  
or  
<http://net-control>  
be called and adjusted as desired.

# NET-PwrCtrl Firmware Version 6.4

## ADV, IO




Ethernet jack:  
Green LED = Ethernet connected  
Orange LED = Data transmission

Fuse 10A + spare fuse

## HUT

R1..R8 potential-free NO contacts

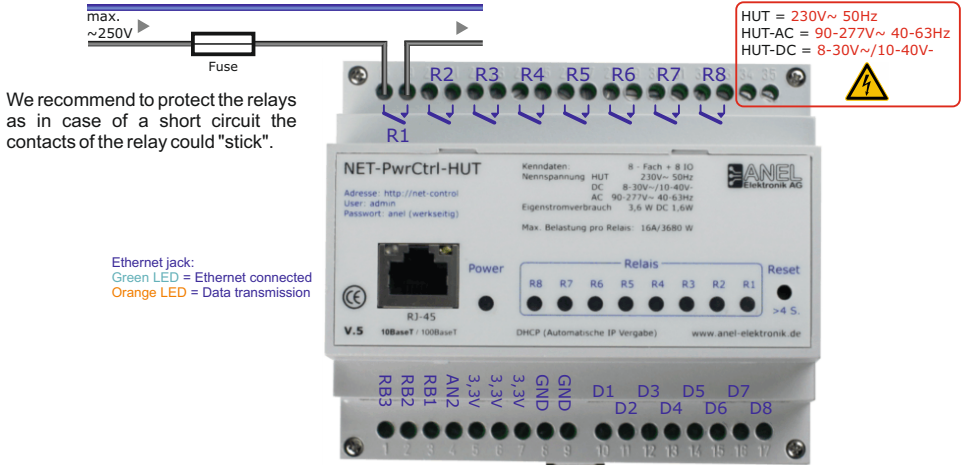


We recommend to protect the relays as in case of a short circuit the contacts of the relay could "stick".

Ethernet jack:  
Green LED = Ethernet connected  
Orange LED = Data transmission

## HUT 2

R1..R8 potential-free NO contacts

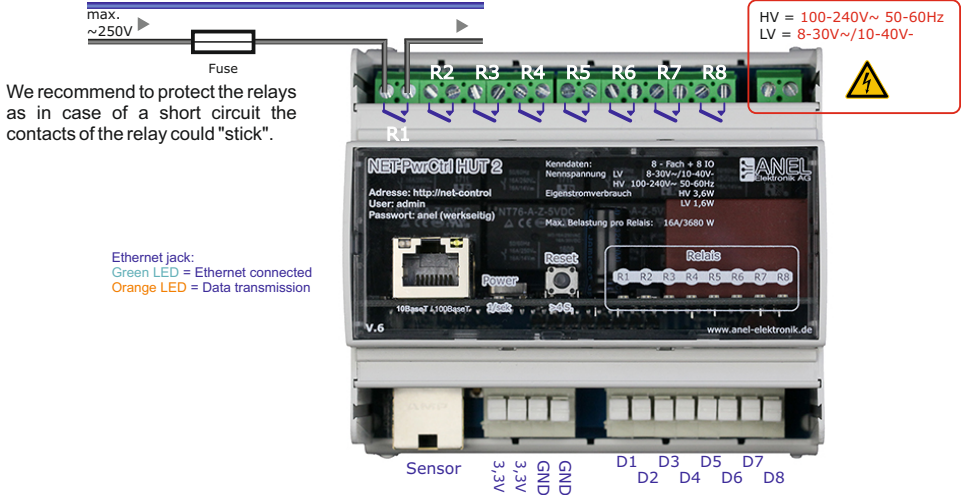

We recommend to protect the relays as in case of a short circuit the contacts of the relay could "stick".

Ethernet jack:  
Green LED = Ethernet connected  
Orange LED = Data transmission

## Call NET-PwrCtrl

### Call the NET-PwrCtrl:

- About the hostname from the browser. Name of the device = hostname. (http://net-control in delivery state). If the name of the device is changed, the host name changes accordingly.
- About ,[NET-PwrCtrl Discoverer.exe](#)'. This program searches for all devices in the network and lists them. Double-click on the found strip opens it in the browser.
- Over IP, for example: 192.168.0.5. The IP address is from the DHCP server (mostly in the router) automatically assigned. If the DHCP server is missing, the IP can also be assigned manually.

**Multiple devices in the network:** The NET-PwrCtrl is supplied with the host name: "net-control". The host name must be unique on the network, so it must be changed in the first NET-PwrCtrl before the second one can be connected.

**HTTP Port:** If default port HTTP 80 has be changed to address multiple devices from the Internet or to operate HTTP server, address the device have to specify the hostname (or IP) + ":" + port number, e.g. http://net-control:85.


Two same host names with different IP's in the router table may disturb the connection until prevented.

## Reset

**Reset the NET-PwrCtrl:** via Settings/LAN/Factory Settings

or reset button:

Press and hold the reset button for more than 4 seconds. The power LED will flash 2 times per second. Release the button.

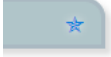For settings: Time, I/O, Switching, Wake On LAN, Timer, Keepalive and Sensors can by clicking on the star (top right)  reset **this single function** to factory settings.

## HTML-Upload

The HTML of the pages can be changed and uploaded.

### Please note:



There are max. 256kB Flash memory for HTML available.  
File name can not be longer than 20 characters (including extension).

**Important!** If NET-PwrCtrl can not be reached after the upload (error in the HTML data),  
via `/html_upload` a direct connection to the upload can be established.

The HTML data (HTML/webpages) can be merged with the *HTTP Image Builder.exe* into a .bin file (HTML\_Img.bin). This .bin file can be then uploaded. Depending on the size of the .bin file, the process takes up to 30 seconds.

If there are problems with the display in the browser:  
Delete browser data (history) (Ctrl + Shift + Del)

## HTTP Image Builder.exe

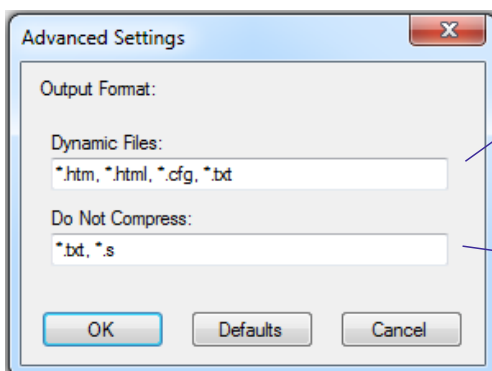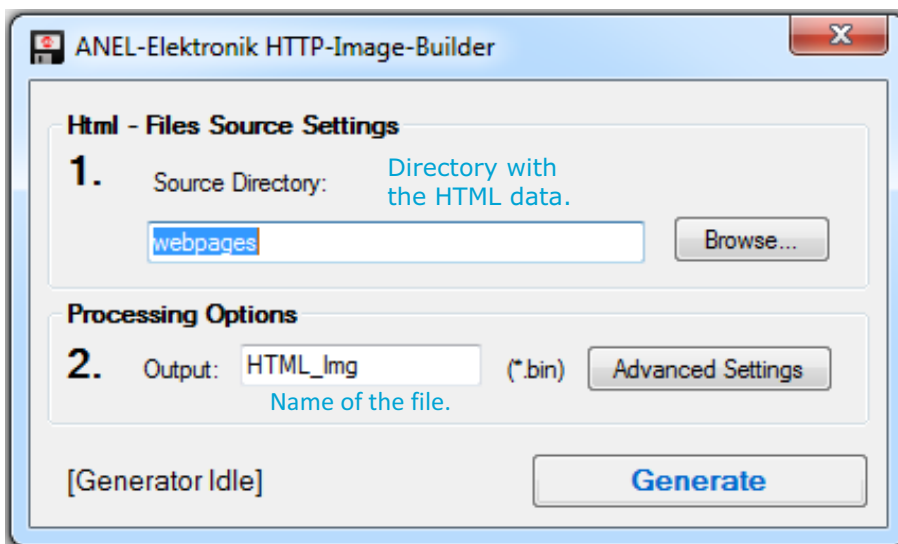

Files that are in the \* .bin file  
to be compiled.

Files that do not contain  
~name~ variables are  
compressed. Specify data types  
that should not be compressed  
here.

## Control

### Relays/Sockets

Name / Position / Function      Temperature inside.

Control      ? □

NET - Power Control      192.168.2.109      28.8°C

Relays

Server #1 ①	Licht ②	Mikroskop ③	Nr.4 ④
Nr.5 ⑤	Nr.6 ⑥	Nr.7 ⑦	Nr.8 ⑧

HoldOn      Blocked

Sockets/Relays

Green	= switched on
Brau	= switched off
Blue	= switched on HoldOn
Dark blue	= switched off HoldOn
Light green	= blocked switched on
Light Brown	= blocked switched off
Frame white	= Blinking

This feature is not in ADV

### Digital Input/Output (I/O)

Input / Output

IO In-/Output

IO-1 ①	IO-2 ②	IO-3 ③	IO-4 ④
IO-5 ⑤	IO-6 ⑥	IO-7 ⑦	IO-8 ⑧

Output      input

IO Input/Output

Output	
Green	= switched on
Brau	= switched off
Blue	= switched on HoldOn
Dark blue	= switched off HoldOn
Frame white	= Blinking
Input	
Light green	= '1'
Light Brown	= '0'

## LAN

**Hostname** = name of the device must be unique in the network.

### Network Settings

Hostname

no special characters or spaces

**Automatic IP setting**

☒ DHCP (for a static IP switch DHCP off)

**TCP/IP Settings**

These parameters are assigned by DHCP.

IP:

Mask:

Gateway:

First DNS:

Second DNS:

MAC:

If default port HTTP 80 has be changed to address multiple devices from the Internet or to operate HTTP server, address the device have to specify the hostname (or IP) + ":" + port number, e.g. http://net-control:85.

HTTP Port

**0-65535**

The MAC can not be changed.

☒ Allow UDP communication

Send

Receive

(port number)

**0-65535**

After saving the device restarts!

After IP - change we recommend to turn device off and on.

**MAC** must be unique in the network and must not be changed. The last three pairs of digits form the serial number.

The **UDP communication**. The UDP interface can also be used to control the device from its own application.

**Factory settings:** Sets all parameters of the device to factory settings and restarts without changing the switching status of the relays.

The functions: Save, Restart, Factory Settings and Firmware Update restarts NET-PwrCtrl.

**Important:** If the host name or IP of the device has been changed:

- Browser (all windows) must be closed.
- Start the browser and call NET-PwrCtrl with the host name.

After 6 minutes, the assignment in the browser / NetBios will be deleted automatically.



## User

Username and password are limited to 12 characters each. Options without permission are not displayed.

This setting is also relevant for the UDP control (user;password).

Authentication (Login) can be switched off here.  
This option only appears when admin is logging in.

The language can be changed here anytime.  
After saving, the browser is automatically refreshed.

User name	Password	Permission
admin	....	<input type="checkbox"/> without authentication / login <input type="button" value="English"/> <p>After changing the language Browser will be refreshed.</p> <p>All options allowed.</p>
user1	....	<input checked="" type="checkbox"/> Control <input type="checkbox"/> Lan <input type="checkbox"/> User <input type="checkbox"/> Time <input type="checkbox"/> I/O <input type="checkbox"/> Switching <input type="checkbox"/> WOL <input type="checkbox"/> Timer <input type="checkbox"/> Keepalive <input type="checkbox"/> Sensors <input type="checkbox"/> Backup <input checked="" type="checkbox"/> Logbook Relays: <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input type="button" value="Deutsch"/>
user2	....	<input checked="" type="checkbox"/> Control <input type="checkbox"/> Lan <input type="checkbox"/> User <input type="checkbox"/> Time <input type="checkbox"/> I/O <input type="checkbox"/> Switching <input type="checkbox"/> WOL <input type="checkbox"/> Timer <input type="checkbox"/> Keepalive <input type="checkbox"/> Sensors <input type="checkbox"/> Backup <input checked="" type="checkbox"/> Logbook Relays: <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input type="button" value="Deutsch"/>
user3	....	<input checked="" type="checkbox"/> Control <input type="checkbox"/> Lan <input type="checkbox"/> User <input type="checkbox"/> Time <input type="checkbox"/> I/O <input type="checkbox"/> Switching <input type="checkbox"/> WOL <input type="checkbox"/> Timer <input type="checkbox"/> Keepalive <input type="checkbox"/> Sensors <input type="checkbox"/> Backup <input checked="" type="checkbox"/> Logbook Relays: <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input type="button" value="Deutsch"/>
user4	....	<input checked="" type="checkbox"/> Control <input type="checkbox"/> Lan <input type="checkbox"/> User <input type="checkbox"/> Time <input type="checkbox"/> I/O <input type="checkbox"/> Switching <input type="checkbox"/> WOL <input type="checkbox"/> Timer <input type="checkbox"/> Keepalive <input type="checkbox"/> Sensors <input type="checkbox"/> Backup <input checked="" type="checkbox"/> Logbook Relays: <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input type="button" value="Deutsch"/>

Relays/sockets can be disabled for users and displayed  
as inactive (as locked in Settings/Switching).

## Time

With Internet access, the time is automatically synchronized by an SNTP server (port 123 - must not be blocked by the firewall). SNTP time is refreshed every 60 minutes. Without Internet access, the time must be synchronized via browser time / system time.

The timers are inactive without valid time synchronization.

Time Setting

with the Internet time server (SNTP port 123):

The time is synchronized automatically (every 60 min.) with the Internet Time Server (SNTP). Port 123 should not be blocked. After the restart/power-failure the clock is synchronized immediately.

Permit

SNTP Server:

DST correction

☒

☒ It's summertime

Internal clock: Fri 10/08/2018, 15:39:23

SNTP test

To calculate the sunrise and sunset, specify latitude in the format B ± 90,0 °. Southern latitude is indicated by "-". Specify latitude in the format: L ± 180,0 °. Western length is indicated by "-". To the geographical position the time zone (UTC) have to be changed. In DST time 1 hour is added. With the correction, the on and off times can be adjusted. The respective sunrise and sunset times will be recalculated every day at 02:00 AM.

Sunrise and sunset

To calculate the sunrise and sunset: specify time zone according to UTC, latitude and longitude. Latitude in the format: ± 90.0°. South latitude with minus in the front. Longitude in the format: ± 180.0°. West longitude with minus in front. In the summer time 1 hour will be added.

Time zone	Geo. location	LAT±90,0°	LONG±180,0°	Calculated	Correction ±120	Timer-time
1	latitude	<input type="text" value="51.55"/>	<input type="text" value="+north"/> <input type="text" value="-south"/>	sunrise: 06:13	+ <input type="text" value="-60"/> min. =	05:13
UTC ±12	longitude	<input type="text" value="6.76"/>	<input type="text" value="+east"/> <input type="text" value="-west"/>	sunset: 21:02	+ <input type="text" value="60"/> min. =	22:02

Save

If Internet access is not possible, the internal clock of the device must be synchronized via the system clock (computer time).

synchronize with browser time:

If Internet access is not possible, the internal clock must be synchronized with system (computer time). The automatic synchronization in this mode is not possible. It is important (after a power failure) to make manually synchronization because the timers can not work without clock.

System time: Fri, 10/08/2018, 15:39:19

Set the clock

## IO - Input/Output

This feature is not in ADV

IO can be used as an input - to recognize external events such as: doors, windows, etc;  
as output - further control channels can be set up.

The purpose of the inversion is - regardless of the type of switching (normally open or normally closed) - to represent all desired keys the same. Example: If IO1 - IO3 normally-open and IO4 normally closed, IO4 can be inverted so that all inputs are displayed identically and therefore changes are detected more quickly.

A pullup resistor "pulls" the input to logical 1 (about 2.5V). This allows switches - connected between GND and an input - to be operated directly (without additional elements).

Settings I/O

☒ IO switch on
☐ Switch IO Pull Up Resistor

No.	Name	Output	Input	Invers	Hold On	Symbol	Control					Switch relay(s) thru I/O:							
							H	LH	HL	TL	TH	1	2	3	4	5	6	7	8
1	IO-1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10112	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
2	IO-2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10113	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
3	IO-3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10114	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
4	IO-4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10115	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
5	IO-5	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10116	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
6	IO-6	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10117	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
7	IO-7	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10118	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
8	IO-8	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10119	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Save


If the function: "Switch relay(s) thru I/O" is used, the "Control" function can be used to determine the type of control (edge) of the IO input when switching the relays:

- H level control (is IO high (H) is the relay on, IO = 0 (L) is off.
- LH switching on at rising edge from L (0) to H (1); switch off manually.
- HL switch off on falling edge from H to L; switch on manually.
- TL toggle (switching) with rising edge from L to H.
- TH toggle (switching) on falling edge from H to L.


An unused I/O output can be used as a switch for multiple sockets.

## NET-PwrCtrl IO


All digital outputs = 0 ... 3.3V  
Input: „0“ < 0.4V; „1“ > 2.4V < 5V

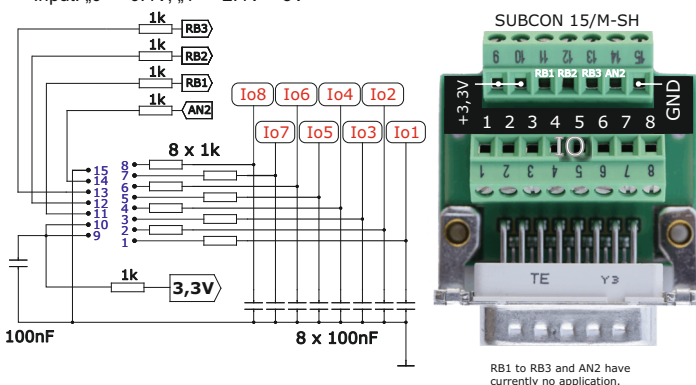

## NET-PwrCtrl HUT (2)

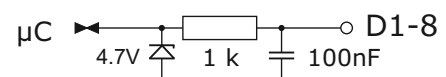

Output: „0“ = 0V; „1“ = 3,3V max. 2 mA  
Input: „0“ < 0.4V; „1“ > 2.4V < 12V

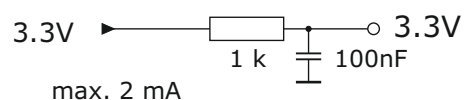

## Switching

Relay is set for the given time (max 65535 seconds = 18.2h):

when **on**, switched on (relay normally off).

when **off**, switched off (relay normally on).

It is used to control external devices that require a switching pulse. This function has the **highest priority**. All other switching operations (timer, etc.) are switched as an impulse.

Lock: locks the individual sockets/relays for the controll. Button appears gray and can not be clicked.

The name of the socket can be max. 16 characters. Special characters can "confuse" some browsers.

Relay or IO is switched on as long as the key is held down. Two relays or IO's can be used for +/- control (eg dimmer).

After the **restart (power failure)** there is the following switching behaviour for the sockets:

[off] - switch off.

[on] - switch on if necessary with delay [to (s)].

[rs] - restore the last state, if necessary with delay.

The delay can be max. 65535 seconds are what: 1092 minutes or 18.2 hours results

Switching ★

Name /Position/Function NET - Power Control

No.	Name	Lock	Impuls		Hold On	Symbol	at the start:			on when Temp.			Switch on (max. 65535 s = 18.2h)			
			on	off			Time(s)	off	on	rs	after (s)	<		>	28.7°C	
1	Server #1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	12	<input type="checkbox"/>	10122	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on
2	Licht	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10123	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on
3	Mikroskop	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10124	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on
4	Nr.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input checked="" type="checkbox"/>	10125	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on
5	Nr.5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10126	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on
6	Nr.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10127	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	off
7	Nr.7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10128	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	off
8	Nr.8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	10129	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	0	<input type="checkbox"/>	<input type="checkbox"/>	22.0	30	on

Operating distance of the relays with simultaneous switching:  (0-255) milliseconds.

since reboot 72 sec. =  Day(s) and

Shows elapsed seconds since restart - important for the time delay after startup: It helps to find out how far the power up process has progressed.

The sockets are - for an interval of max. 65535 seconds - on or off. The action taken is indicated in the button and depends on the state of the socket (switched on / off).

Simultaneous switching = only possible via UDP-, URL-Protocol or IO.

## Wake on LAN

After turning on the relay when "WOL sending" is selected and the delay has elapsed (delayed (1-255 sec.)), ['Wake on LAN'](#) start signal is sent to the network receiver with the MAC (MAC receiver).

The Wake on LAN (in BIOS) option must be enabled in the network receiver.

"Send WOL immediately" button immediately sends the WOL signal regardless of the status of the relay and "Send WOL".

**Wake on LAN** ★

After switching on the relay/socket when 'Send WOL' selected and the latency (delay) gets the network receiver with the MAC (MAC - receiver) [WOL - Wake on LAN](#) start signal. In the network receiver 'Wake on LAN' must be enabled.

No.	Name	Send WOL	MAC - receiver	delayed (1-255 sec.)	Send WOL immediately
1	Server #1	<input type="checkbox"/>	01:00:00:00:00:00	1	1
2	Licht	<input type="checkbox"/>	00:02:00:00:00:00	1	2
3	Mikroskop	<input type="checkbox"/>	00:00:03:00:00:00	1	3
4	Nr.4	<input type="checkbox"/>	00:00:00:04:00:00	1	4
5	Nr.5	<input type="checkbox"/>	00:00:00:00:05:00	1	5
6	Nr.6	<input type="checkbox"/>	00:00:00:00:00:06	1	6
7	Nr.7	<input type="checkbox"/>	00:00:00:00:00:00	1	7
8	Nr.8	<input type="checkbox"/>	00:00:00:00:00:00	1	8

## Timer

Timer: 99:99 entered as time to ,from' or ,to', skips the function. It can only be switched on or only switched off, for example: It is switched on manually in the morning, as required, and switched off automatically at 23:00 in the evening (99: 99; 23: 00).

Timer - Relays 1: Server #1

Relay No.:

12345678

Timer	on	weekday	from	to	
Timer 1	<input type="checkbox"/>	1	1=Sun	00:00	01:59
Timer 2	<input type="checkbox"/>	2	2=Mon	00:00	23:59
Timer 3	<input type="checkbox"/>	3	...	00:00	23:59
Timer 4	<input type="checkbox"/>	4	7=Sat	00:00	23:59
Sundial	<input type="checkbox"/>	1234567	05:10	22:06	Calculated sunrise & sunset + Correction max. ±120 min. = Switching time 999 skips switching time
			0	0	
			05:10	22:06	
			there	off - or	on

Time

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sun

Mon

Tue

Wed

Thu

Fri

Sat

Exceptions (day/month). When days chosen all timers are skipped.

Day	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
Jan																															
Feb																															
Mar																															
Apr																															
May																															
June																															
July																															
Aug																															
Sept																															
Oct																															
Nov																															
Dec																															

D

Save

Sundial: The ,from' -'to' times are calculated automatically (2:00 AM) according to the information in the Time section. With: "In time off or on", it can be determined whether the relay should be switched:

Is selected "In time off" = switched on at night - switched off during the day.

If "On time" is selected = switched off at night - switched on during the day.

The solar timer can be individually corrected ( $\pm 120$  min.) or skips by entering 999.

## Keepalive Timer

### Keepalive Timer:

Sends to the IP a ping [every (min)] and [if there is no echo (no answer)] consecutively - the relay switches off for [shutdown for (sec.)] .

After [continue after (min)], pinging continues. With the "Ping" button the IP can be pinged and tested.

'Switch off for ' = 0: it is only switched off.

'Continue after (min)' = 0: the function does not continue during the overflow.

Max. ping response time = 1000ms.

No.	on	Send to the IP or Host	a ping	every (minute)	and if no echo x	switch off for (sec.)	continue after (min)	<input type="checkbox"/> detailed log
1	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
2	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
3	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
4	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
5	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
6	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
7	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
8	<input type="checkbox"/>	0.0.0.0	Ping	1	3	60	3	
		<input type="checkbox"/> Switch off relay						Save & Restart
		Nr: 7 sek: 57 min: 28 IP=0.0.0.0	Test	1-15 minutes	1-15	1-255 sec 0=only off	1-255 min 0=stop	





## Sensors

This function only HUT, HUT2

- External sensor for the Net-PwrCtrl - HUT & IO.
- Temperature, humidity & brightness with high accuracy.
- Connection (simple and cost-effective) via ethernet cable including power.
- Adjustable hysteresis.
- All relays controllable.
- Adapter for HUT / HUT2
- DIN rail and 'wall' mounting.

Measurement:	Temperature	Humidity	Brightness
Sensor IC	SHT21	SHT21	BH1750FVI
Operating Range	-40 - +125 °C	0 - 100 %RH	0 - 65535 lx
Resolution	0.01 °C	0.04 %RH	1 lx
Accuracy tolerance	±0.3 °C	±2.0 %RH	1.2
Repeatability	±0.1 °C	±0.1 %RH	1 lx

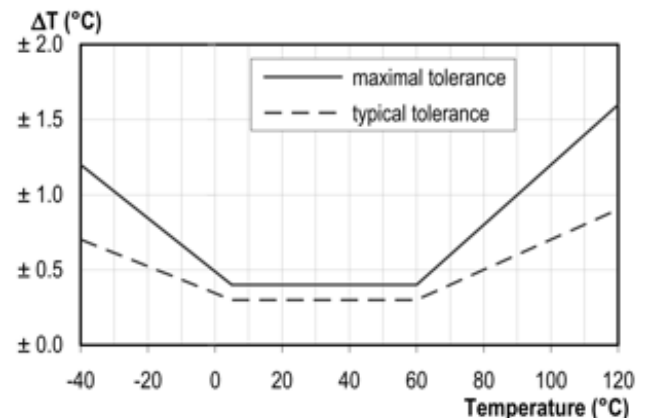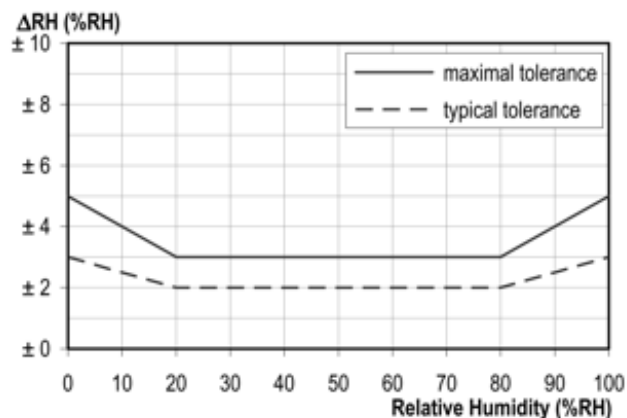

## Sensors




The measurement interval is 16 seconds.

Measurement valid trigger: 0.00

20 seconds after the (new)start of device or the sensor is switched on, the LED 'Measurement valid' lights up green. From this moment the relays can be switched.

The hysteresis is added in the upper part of the parameter, in the lower part subtracted. 22.0 +/- 0.5 = 21.5 (off); 22.5 (on). Greater hysteresis = more fluctuations but less frequent switching.

☒ Switch on Sensor 1.

On/Off	Sensor	Value	Switch when		Hysteresis	Relays								
			<	>		+/-	1	2	3	4	5	6	7	8
<input type="checkbox"/>	 Temperature	26.34 °C	<input checked="" type="radio"/>	<input type="radio"/>	22.00	0.50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	 Humidity	24.3 %	<input checked="" type="radio"/>	<input type="radio"/>	50.0	5.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	 Brightness	231 lx	<input checked="" type="radio"/>	<input type="radio"/>	5000	50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Save



## Configuration Backup

The saved configuration file can be used to configure multiple NET PwrCtrl with the same settings. Since the host name of the device needs to be changed (must be unique on the network) after the change is best:

- Close browser (all windows).
- Start the browser and call NET-PwrCtrl with the new host name.

Click on 'Save configuration' download ,net-pwrctrl.cfg'.

Excerpt:

```
// NET-PWRCTRL_06.4
// This file can be shortened line by line.
// Keywords before ':' must not be changed.
// In the {...} area, '1' may occur only once.
// (R) is read only (will be not changed).
```

```
//-----[Lan]-----
Hostname: NET-CONTROL1
DHCP: 1
IP: 192.168.2.109
Gateway: 192.168.2.1
Mask: 255.255.255.0
First DNS: 192.168.2.1
Secound DNS: 0.0.0.0
```

...

To get special characters please use a UTF-8 capable editor (eg Notepad ++). Depending on the language version, the keywords in the net-pwrctrl.cfg file change. The files of the other language can not be used.

**Attention!** When restoring, the existing configuration is deleted. NET-PwrCtrl restarts.

### Save configuration.

Configuration download. It can be used to configure multiple devices with the same settings (the host name must be unique and changed).

The configuration file is saved under the name 'net-pwrctrl.cfg'.

The file has UTF-8 format: important for using the special characters in the names. Should therefore be edited with a UTF-8 capable editor (such as Notepad ++).

Save configuration.

### Restore Configuration.

The backup window opens in the new tab to be able to easily check the new data in the settings.

The (changed) configuration file:

Datei auswählen

Keine ausgewählt

Send file

After sending the file, the new settings can be checked and accepted or discarded.

## API interfaces

Please use the description from our forum :

### [UDP - Control](#)

For control from the software via UDP socket.

[https://anel-elektronik.de/forum\\_neu/viewtopic.php?f=16&t=207](https://anel-elektronik.de/forum_neu/viewtopic.php?f=16&t=207)

### [URL - Control](#)

For the control from the address bar of the browser.

[https://anel-elektronik.de/forum\\_neu/viewtopic.php?f=52&t=888](https://anel-elektronik.de/forum_neu/viewtopic.php?f=52&t=888)

## Access from the Internet

If NET-PwrCtrl should be controlled via DSL access from the Internet, the router must be set accordingly: The port forwarding of the router must be set to the IP and port of the NET-PwrCtrl.

Below: Example of setting.

NET-IO-HUT-TEST

delete

Name of the redirection

NET-IO-HUT-TEST

Applies to the following device

NET-IO-HUT-TEST

Use template

Web-Server

Ports to redirect

What is that?

TCP

83

-

▶

83

-

TCP

80

-

▶

83


-

+ Create other TCP redirection

Another possibility: [ngrok](#). A (small) server allows access from the Internet without port forwarding and via https: (SSL). It requires registration but is free for only one HTTP/TCP tunnel (stand 08.2018).

Call: `ngrok.exe http <your ip>:<your port> region=eu`

then <http://localhost:4040> in the browser for the address.

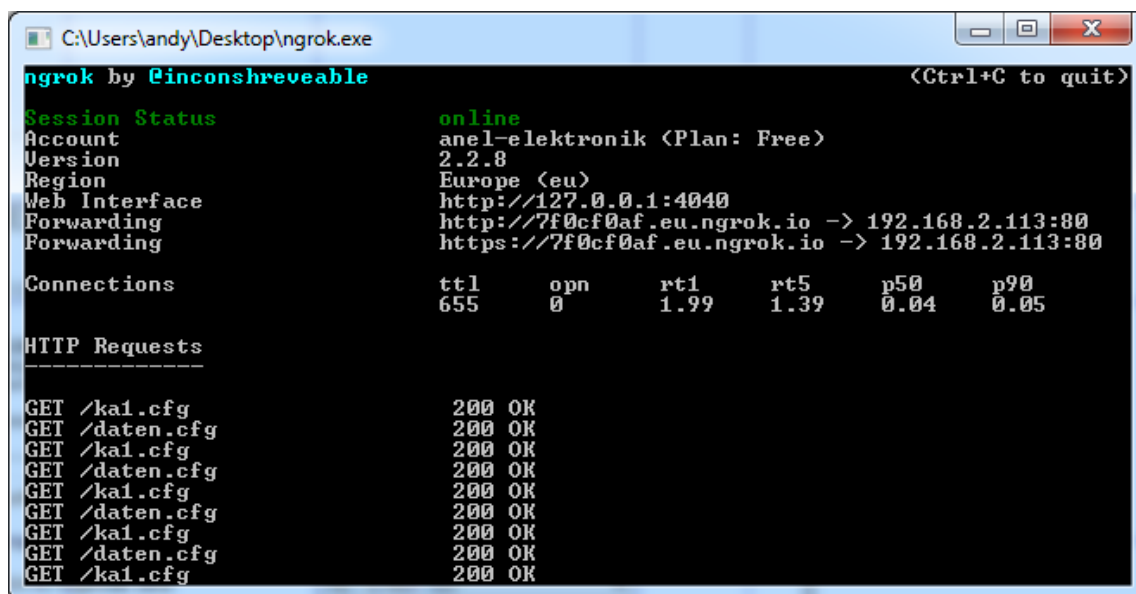

```

C:\Users\andy\Desktop\ngrok.exe
ngrok by @inconshreveable (Ctrl+C to quit)

Session Status
Account      online
Version     2.2.8
Region      Europe (eu)
Web Interface http://127.0.0.1:4040
Forwarding   http://7f0cf0af.eu.ngrok.io -> 192.168.2.113:80
             https://7f0cf0af.eu.ngrok.io -> 192.168.2.113:80

Connections      ttl    opn    rt1    rt5    p50    p90
                  655    0      1.99   1.39   0.04   0.05

HTTP Requests
-----
GET /kal.cfg      200 OK
GET /daten.cfg   200 OK
GET /kal.cfg      200 OK
GET /daten.cfg   200 OK
GET /kal.cfg      200 OK
GET /daten.cfg   200 OK
GET /kal.cfg      200 OK
GET /daten.cfg   200 OK
GET /kal.cfg      200 OK
GET /daten.cfg   200 OK
GET /kal.cfg      200 OK

```